

IMPORTANT NOTICE!

As part of routine maintenance, your Fuji Clean treatment system will periodically require “pump-out” servicing, which removes accumulated solids such as sludge and scum from your system. Frequency of pump-out varies widely based on individual system use but we generally estimate that it should occur approximately once every two years. Your service provider will inform you when your system is in need of pump out. It is important that your pump out provider be familiar with proper pump-out technique. Questions? Please call your local distributor or Fuji Clean USA (207-406-2927).

FUJI CLEAN PUMP-OUT INSTRUCTIONS

Step 1. Turn off all electrical components.

Step 2. Clean the inlet and outlet pipe.

Step 3. Transfer suspended solids and scum from Chamber 3 back to Chamber 1.

Step 4. With pumpout hose, remove scum and sludge on the filtration media from Chamber 2 FIRST! Otherwise you risk solids being drawn up into the media in Chamber 2.

Step 5. Insert suction hose into the baffle. Remove sludge from the bottom Chamber 2. Wash media and chamber wall.

Step 6. Remove scum and sludge Chamber 1.

Step 7. Re-fill the system with water to Low Water Level (LWL).

Step 8. Turn on all electrical components.

