


**Appendix II
GMP #141A**

Best practice is to locate the well site a minimum of 50 feet from all property lines.

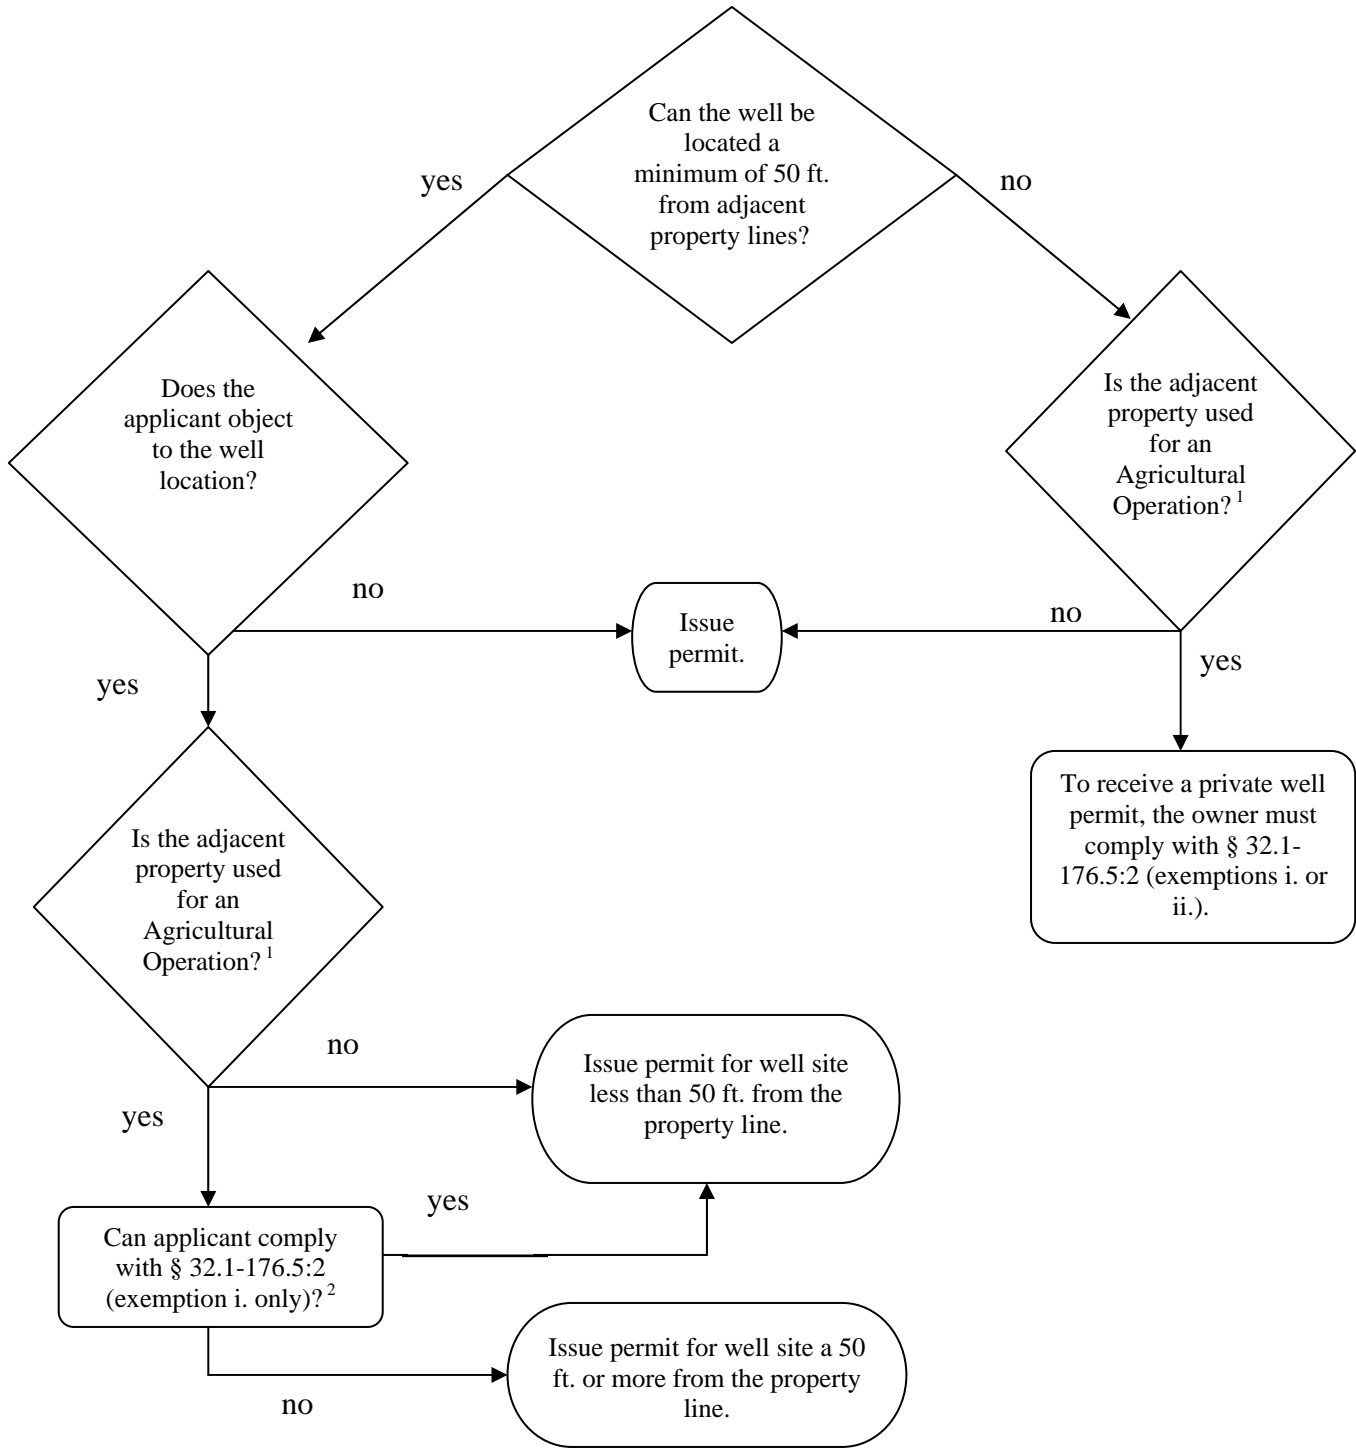

1. EHS SR. or AOSE has discretion to determine that the adjacent property is not an agricultural operation. On “Bare Application”, EHS SR. documents on permit that “no other site on property complies with PWR.” “Express well” applicant must indicate on the application if adjacent properties are an agricultural operation.
2. Obtain written permission from the adjacent property owner.